




To install your new rainbarrel:

STEP 1: Shorten your existing downspout so that the elbow will be above the rainbarrel.

STEP 2: Attach the overflow sleeve to the downspout on the back of the rainbarrel. Fit drain hose through groove under barrel and direct flow to desired area.

STEP 3: Place the rainbarrel under the downspout*.


If you like, you can raise the barrel on concrete blocks to create room under the outflow spout to fill watering cans, etc.

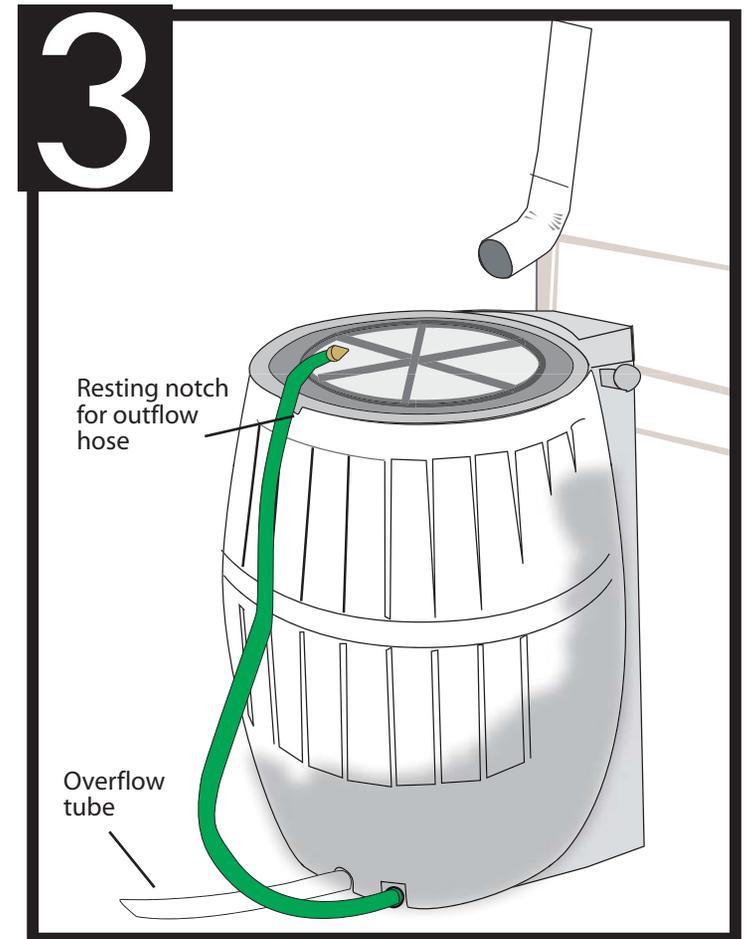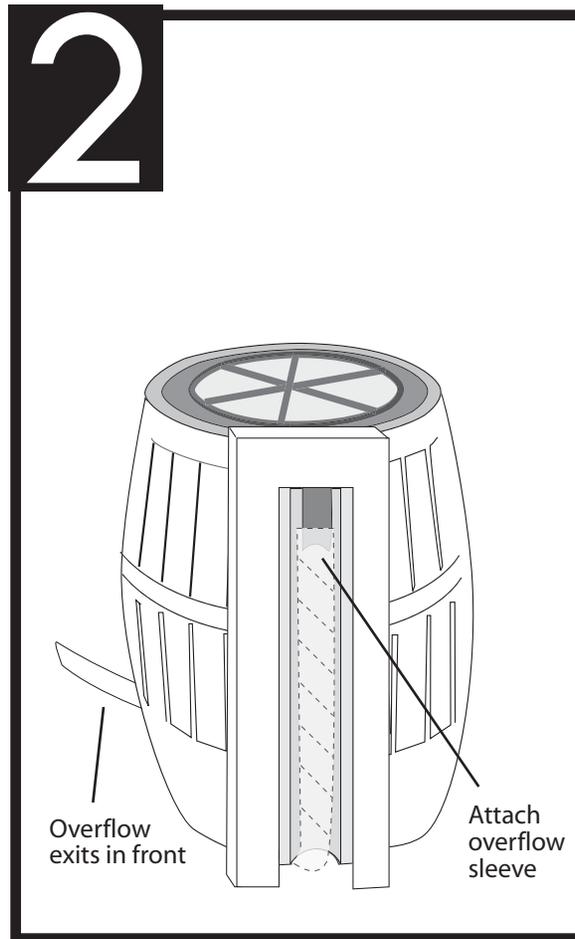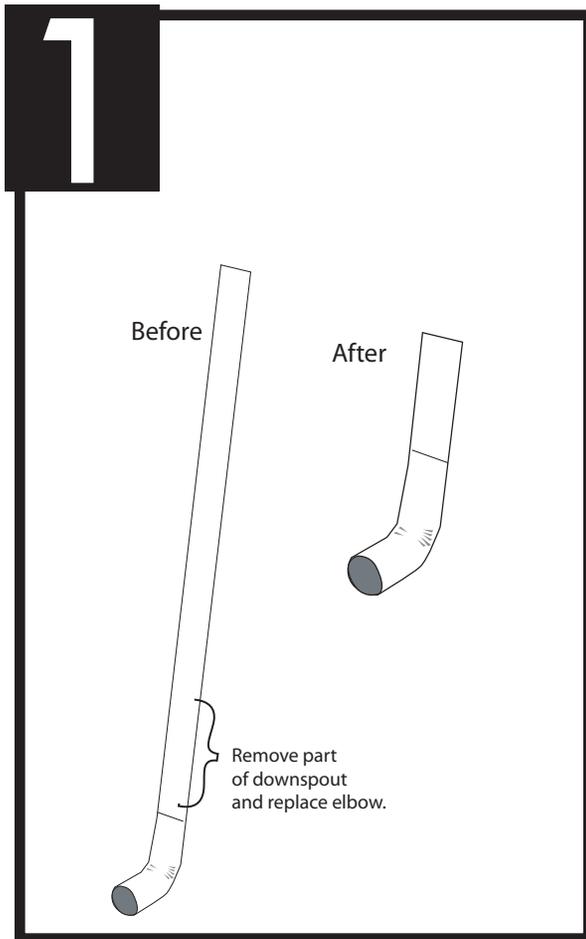

** If your rainbarrel cannot be placed under a downspout, see alternate installation instructions on reverse.*

Alternate Installation

If you cannot place your rainbarrel under a downspout, you may install it where two roofs meet, as shown below. Position the barrel so that the rim will catch both dripping water and harder rain.

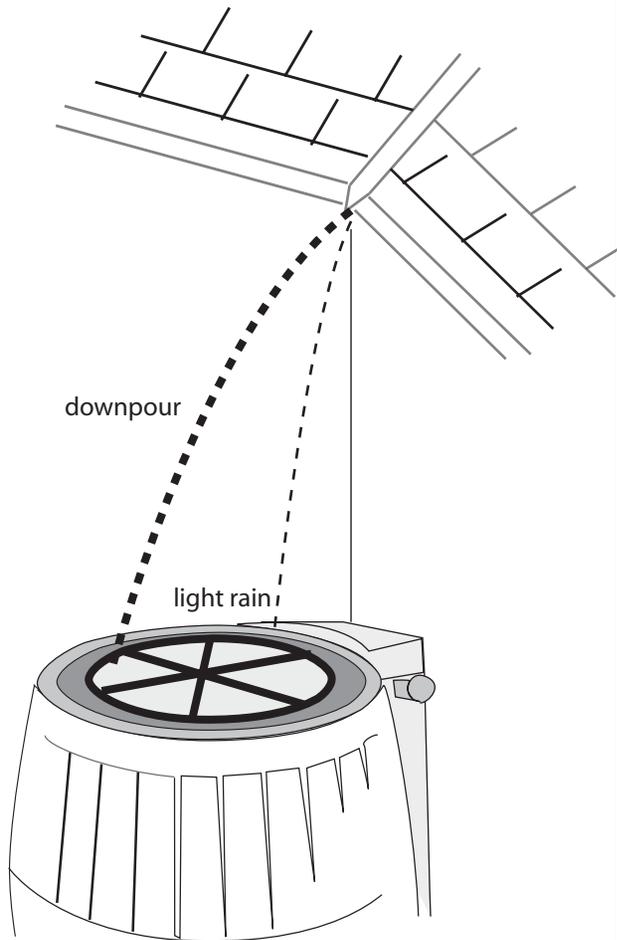

To connect two rainbarrels:

Step 1: With a hacksaw, cut the end off one connecting tube each on barrel A and B. Be careful not to cut off the raised part of the tube.

Step 2: Fit the overflow sleeve onto the open tube ends to connect barrels A and B, cutting the sleeve as needed. Use a zip tie or hose clamp to secure the sleeve to the tube.

To connect additional rainbarrels:

Cut the end off one connecting tube on the rainbarrel you are adding (barrel C), and cut the remaining connecting tube on the last barrel in your existing setup (barrel B). Then connect the new barrel using the overflow sleeve, as above.

